

The
**Glass
Balustrade
Company**

How To Measure A Standard Frameless Juliet Balcony

Lasyard House,
Underhill Street,
Bridgnorth,
Shropshire,
WV16 4BB


Phone number:

01746 763477

info@glassbalustradecompany.co.uk

<https://www.glassbalustradecompany.co.uk>

How To Measure for A Standard Framless Juliet Balcony

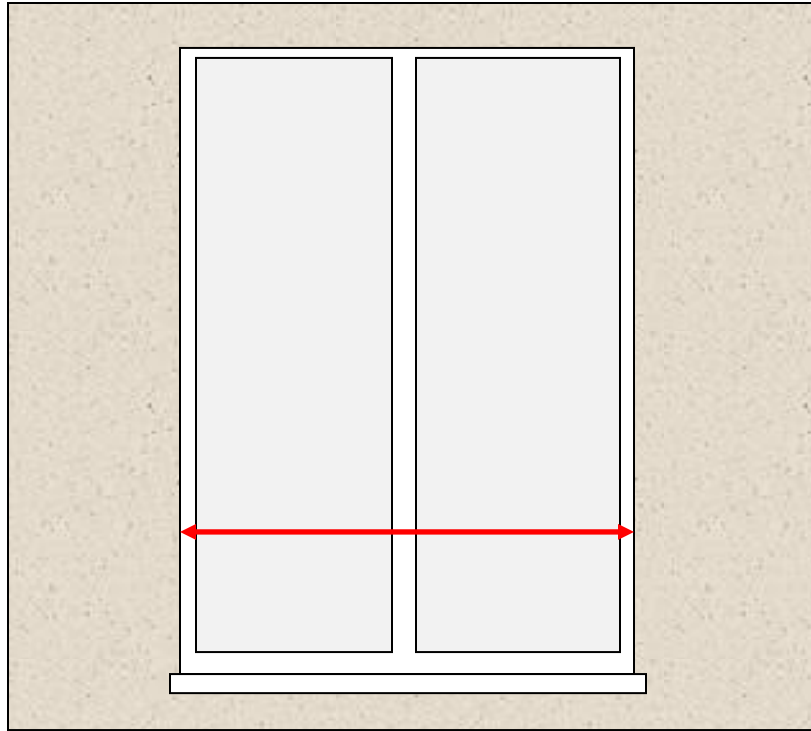

In order to get the correct size glass we need the size of the opening i.e. brick to brick. We also need to know where the internal floor is in relation to the door sill i.e. lower/higher? The glass fixings normally are positioned 100mm away from the edge of the brickwork with 75mm of glass beyond. This is usually set 50mm above the sill to allow for cleaning

